

Procedure for updating uSDX - uSDR

- Start the file with the code (.ino file)
- Connect Arduino to PC
- Click in sequence: File, Examples, Arduino ISP (a window opens)
- Check that Arduino Uno is set and the COM port is the right one (connected to Arduino)
- Click on Sketch and then Upload
- Close the new window, the first one remains
- Turn on the radio
- You can modify the code if you want
- Click on the Tools menu and then Burn Bootloader
- Then click on Sketch and "Upload using programmer"

If everything is OK, the radio will begin flashing and loading the firmware

I hope it's clear and helpful

Alessio IU5MOT